

## PRESENTATION AND USE OF **EH-POWERGROUND**

1. The electrical heating set for greenhouses is delivered to customer in boxes on pallets and is composed from heating mats and temperature control with probe and extension cords.




2. Prepare the benches of the greenhouse using a bottom surface of styrofoam, polyurethane or similar.



3. Open the boxes and take the heating mats, the temperature control and the extension cords.



4. The heating mats have to be connected to the temperature control according to the following schedule:

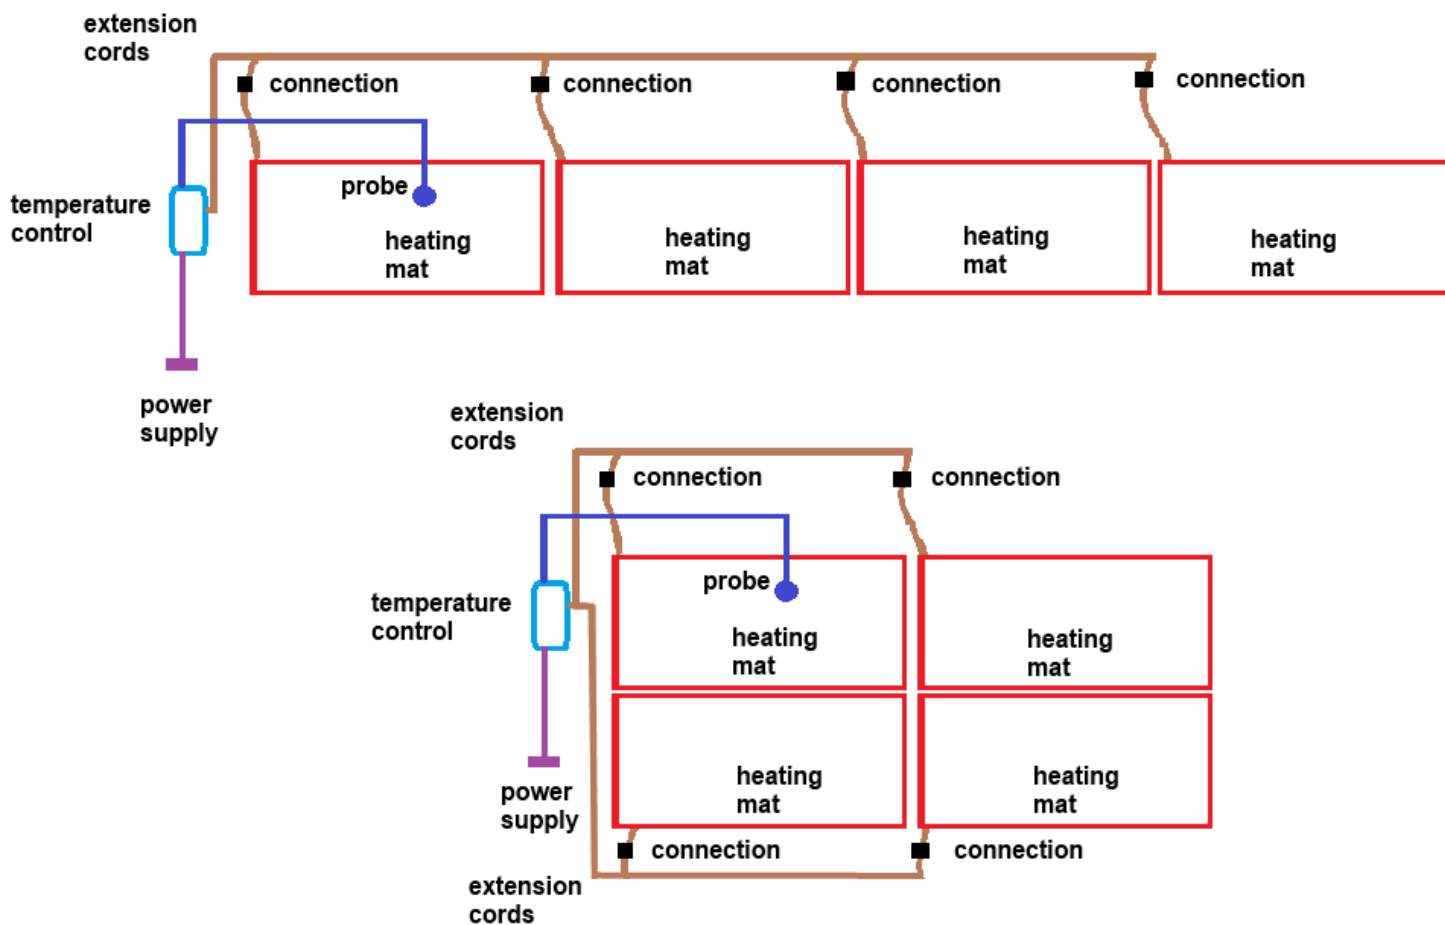

5. Unfold the heating mats on the bench with the labels towards the bottom, be careful not to overlap the mats, you only may overlap the edges.



6. Make some holes on the Styrofoam corresponding to the places where power cables are connected to the mats to favor the passage of the cables themselves.





7. Connect each heating mat, you need to use, to the temperature control directly by using their connections and/or by using extension cords. Each temperature control must be linked only to same mat type (same item code).



8. Insert the temperature probe into the special lodging of the heating mats (or directly into the substrate of the seeds/cuttings trays).



9. Connect the power supply of the temperature control.



10. Place seeds or cuttings trays on the heating mats. Set and control the thermal parameters of the thermostat\*.

\*(before using EH-CONTROL, it must be read the manual of the thermostat very carefully)



**ATTENTION:**

Before using EH-POWERGROUND, it must be read the manual of the product very carefully.

